



WRRP 機油螺絲 解說圖




© 2015 WRRP All rights reserved.

一、注意事項

- 本產品適用於各車種。
- 安裝本產品時，請務必參照使用安裝說明書，避免安裝錯誤造成損壞，一概由消費者自行負責。
- 取用時請勿自行修改原物或以外力施壓變形，以免造成結構破壞，影響安全。
- 如在安裝時發現與說明書不符或有疑慮，應盡快連絡本公司，洽尋各服務人員處理。
- 謝謝您的購買，祝你使用愉快。
- 如需其他產品，請至本公司網址www.wrrp.com.tw

二、零件列表

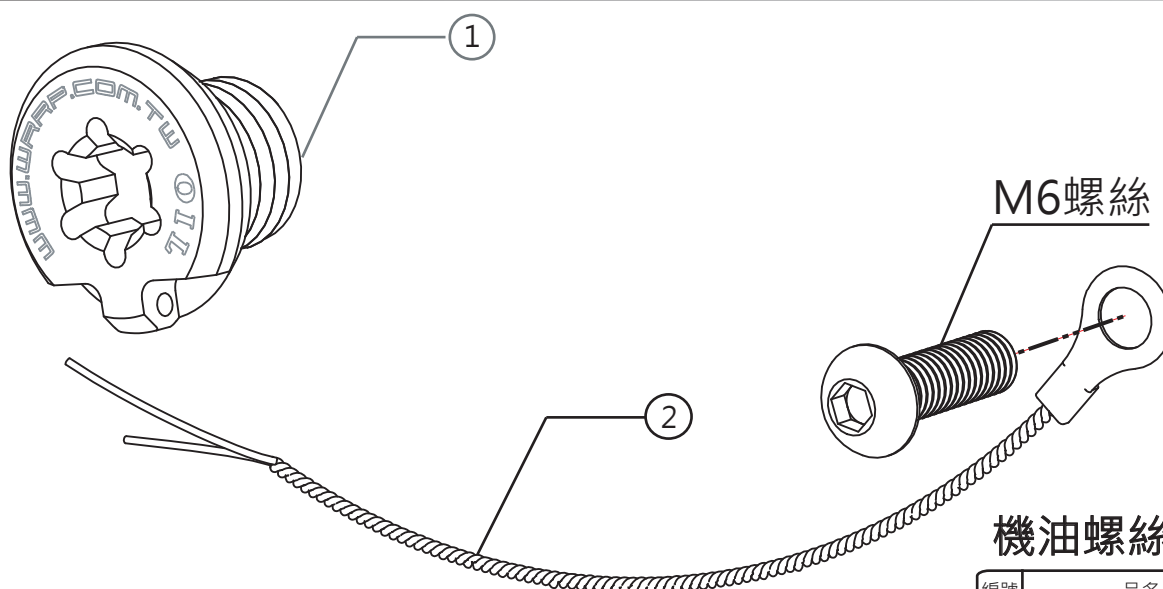

機油螺絲零件圖

編號	品名	數量
1	機油螺絲	1
2	保安鋼絲	1

三、安裝流程




1. 請自行將鋼絲穿越孔位並且旋緊。
2. 可自行尋找合適位置鎖緊。



1. Note

- The product is suitable for all type of motorcycle.
- Please read the instruction before installation, WRRP is not responsible for the damage from non-standard installation.
- Please do not modify or deform any parts in order to prevent structural damage and keep safe.
- If any inconsistencies or uncertainties appear on the manual during installation, please contact our customer service ASAP.
- Thanks for your purchase, have a nice experience.
- More products on our website www.wrrp.com.tw


2. Part List

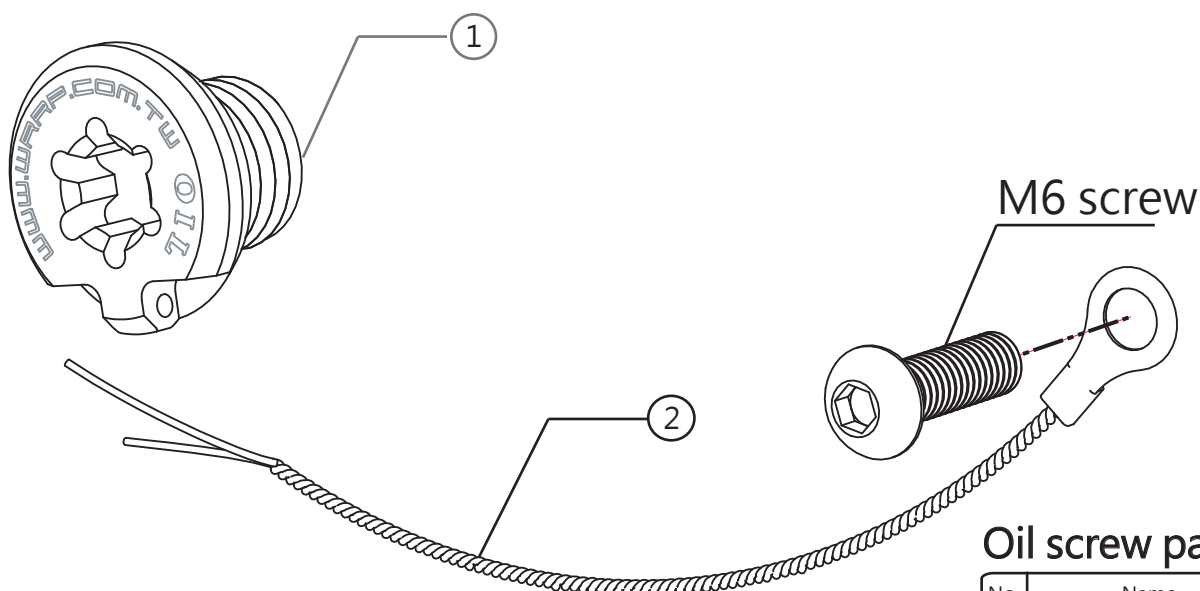

Oil screw parts list

No.	Name	Quantity
1	Oil screw	1
2	Security wire	1

3. Assemble Procedures

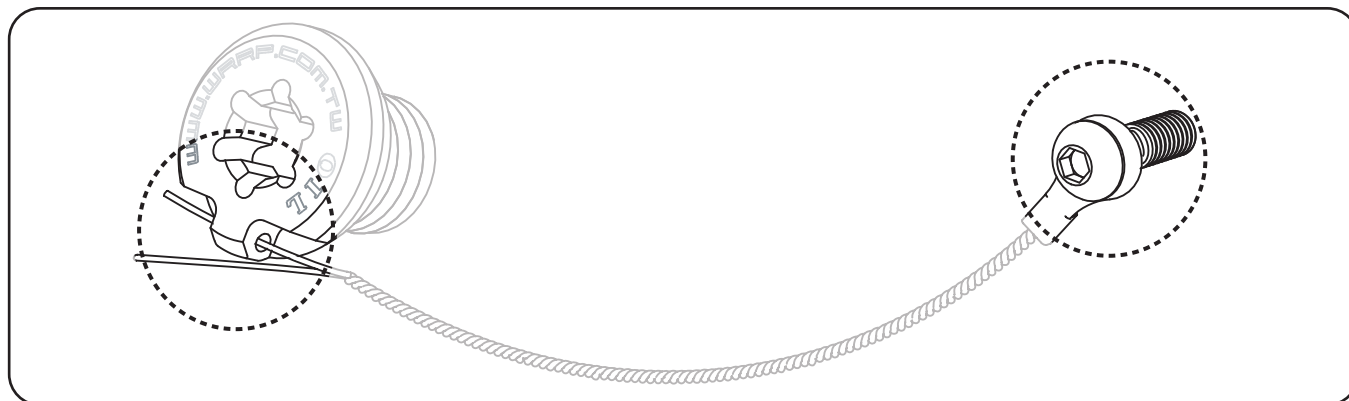

1. Make the wire through the hole and tighten it.
2. Fasten the screw on the proper position.